

## Maytag – Installing the Airwallet Pro330 (NO FEEDBACK)

This document will walk you through the process of installing your Airwallet Pro330 to your MAYTAG machines. This guide is for the following machines:

- MDG
- MHN
- MAT

What is needed:

- Airwallet Pro330 Unit
- (4) 3M 951K Crimp or BLUE Scotch Lock Connectors
- (4) BLUE MALE SPADE crimp connectors
- T20 Security Torx Bit

Airwallet Pro330



## Installation Video

Coming Soon!

## Recommended Dashboard Setup


Fixed → Pulse operated

pulse length: 32 - 50ms, pulse repetition: variable, busy signal: LOW (if feedback connected)


## Recommended Machine Setup

This guide is for reference only and may change. You will need to refer to the Maytag programming guide for pricing setup.

### Maytag MFR/MFS/MXR/MXS Washers

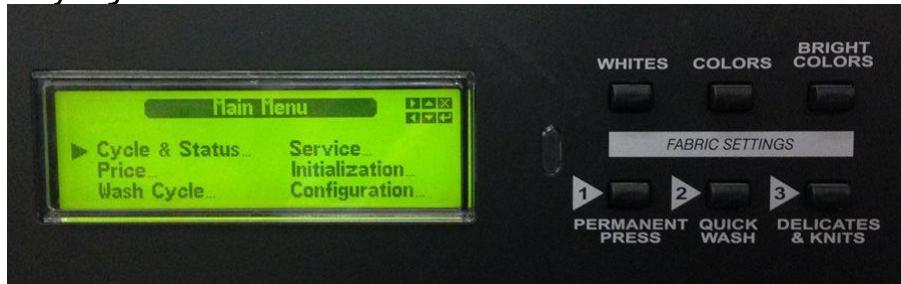

\* BUTTONS in Service – Set-Up Mode work as PROGRAM BUTTONS

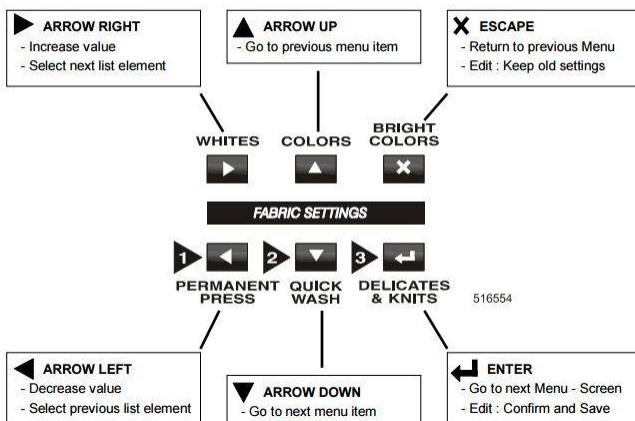

### Single Price

Setting	Value
Value of Coin 1	0.25
Regular Cycle Price	Variable
Price Display	Hidden
Coin/Debit	Coin.Card
Clear Escrow	Yes
Special Pricing...	Off

# airWallet

Enhanced Pricing...      None

## Super Cycle

Use above settings plus the following:

Setting	Value
Enhanced Pricing	Upgrade
Super Cycle Display	Yes
Super Cycle Price	0.25
Deluxe Cycle Display	No
Ultimate Cycle Display	No

## Maytag MHN/MAH/MAT Washers

Code	Code Description	Value
6	Regular Cycle Price	Variable
b	Value of Coin 1	05(5 nickels - \$0.25)
F	Enhanced Pricing Option	00(Off)
J	Coin Option	_C(Coin)
L	Price Suppression Option	PS(On)
n	Clear Escrow Option	CE(On)

Super Cycle

Use above settings plus the following:

Code	Code Description	Value
F	Enhanced Pricing Option	Su(Super Cycle enabled)
H	Super Cycle Upgrade Price	01(1 coin)

## Maytag MVW Top-Load Washers



Code	Code Description	Value
6 NORMAL	Normal Vend Price	Variable
6 DELICATES	Delicate Vend Price	Variable
6 POWERWASH	Powerwash Vend Price	Variable
2	Special Pricing Option	00 (Off)
b	Value of Coin 1	05 (5 nickels - \$0.25)
J	Coin/Debit Option	_C (COIN)
L	Price Suppression Option	PS (On)
n	Clear Escrow Option	CE (On)

D05 error code when pulsing wrong to reset push and hold delicate until you see p01 then hit start to reset machine.


## Installing Airwallet Unit




**WARNING!** Disconnect power or turn off breaker prior to performing this installation.

1. Power down the machine by unplugging or turning off the breaker.
2. Top load machines, remove the 2 top panel screws and open the panel.

**!CAUTION!** Take care not to pull on the wires connected to the panel as they may be damaged.

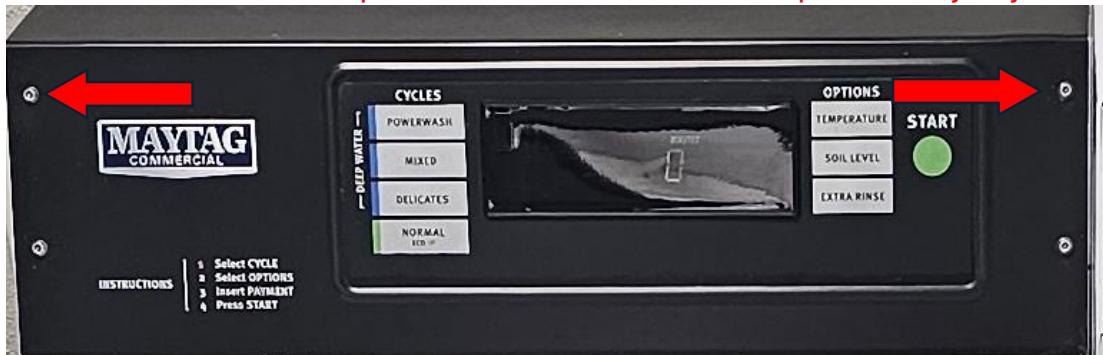


# airWallet

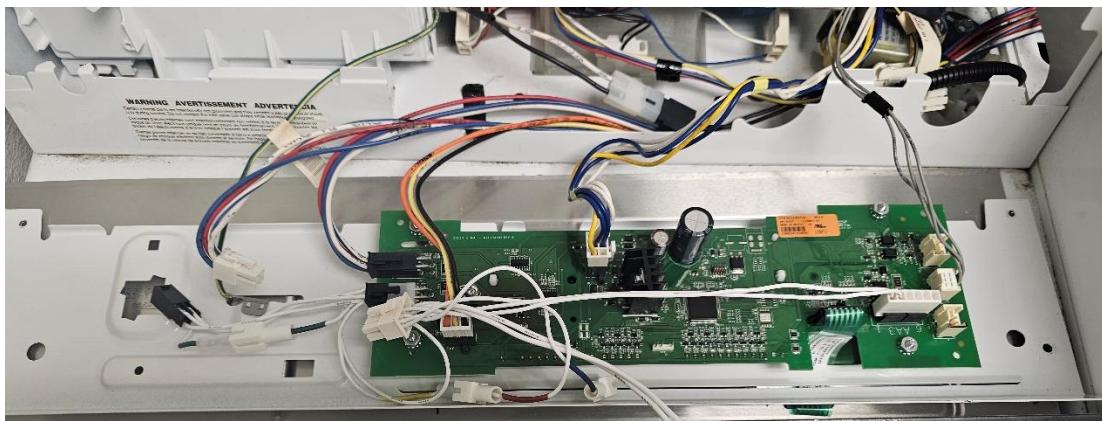

3. Front load machines, Open the front control by removing the T20 torx screws and the TOP of machine if possible. **!CAUTION!** Take care not to pull on the wires connected to the panel as they may be damaged.




4. Locate the 4-pin coin connection AA4 or AA5. The coin drop harness for the main coin drop is the correct one to tap into.


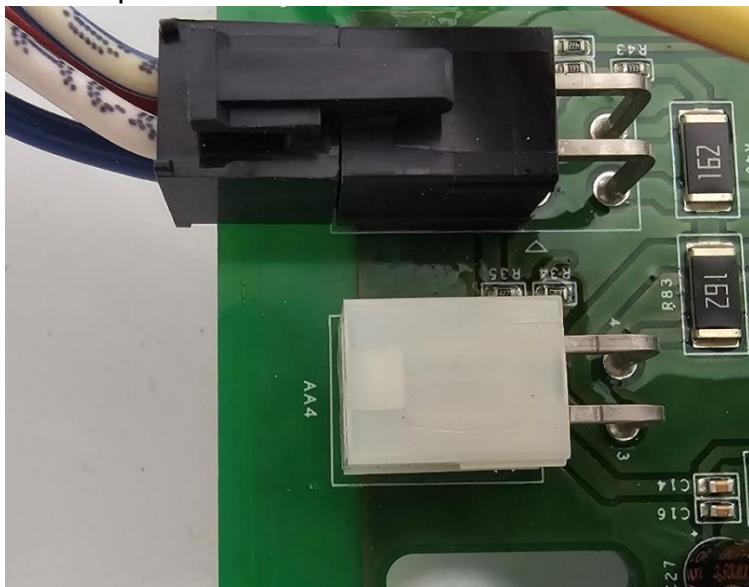


**NO COIN DROP – NOTE** if no coin drop is used, you may have to cut the **WHITE/BLUE STRIPE** and **BLUE** wires in order for the machine to recognize the pulses.

5. Locate the RED and WHITE wires going into this plug.

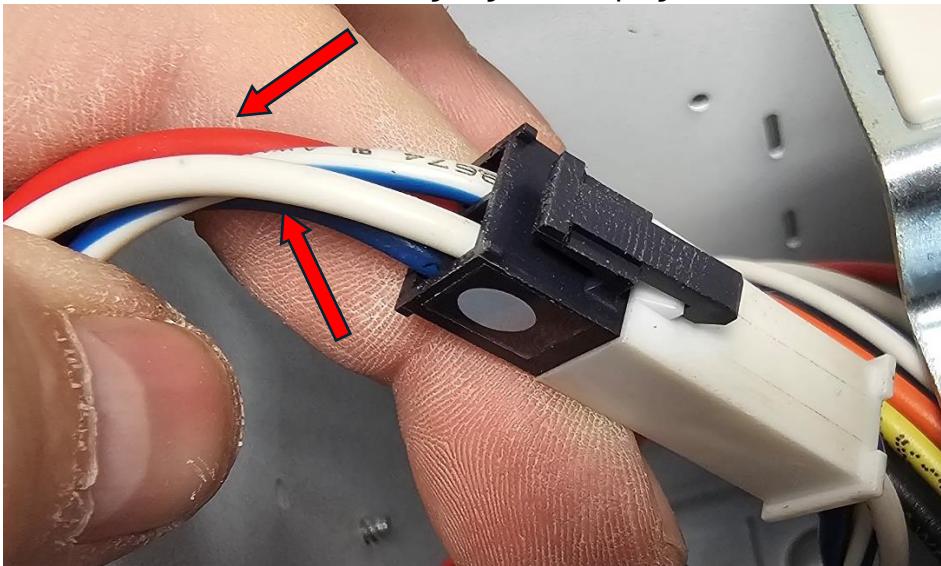


6. To avoid cutting wires, you may want to use a 3M 951K crimp connector or a Scotch lock wire crimp. Apply the crimp to the RED and WHITE wires and connect wires 3 and 7 from the Airwallet unit.

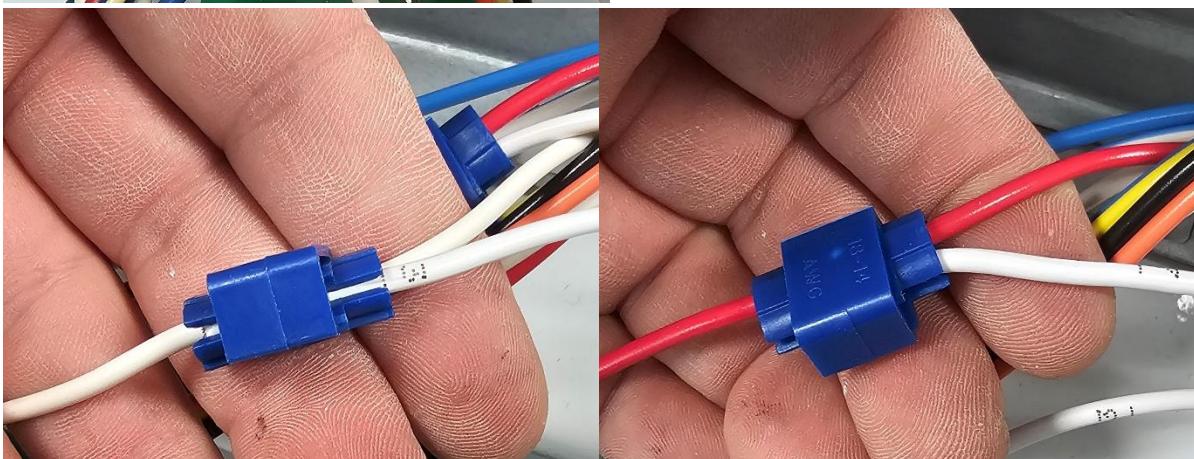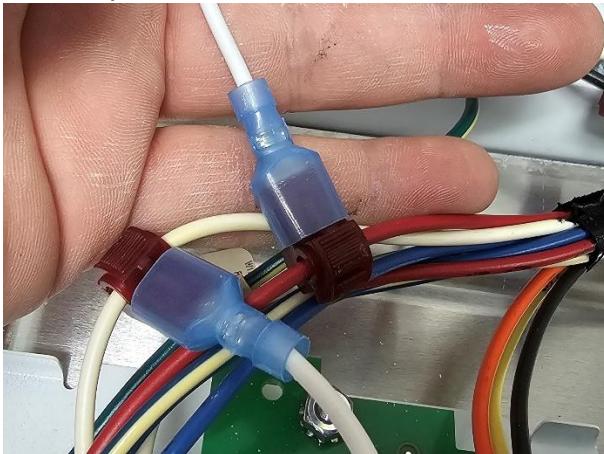

## KEEPING COIN DROP -



7. Locate the WHITE wire on the coin drop harness and cut it leaving enough slack on both ends.
8. Connect WIRE 3 from the Airwallet unit to one side of the cut wire.
9. Connect WIRE 7 from the Airwallet unit to the other cut wire bridging the connection through the Airwallet device.

SEE DIAGRAM BELOW

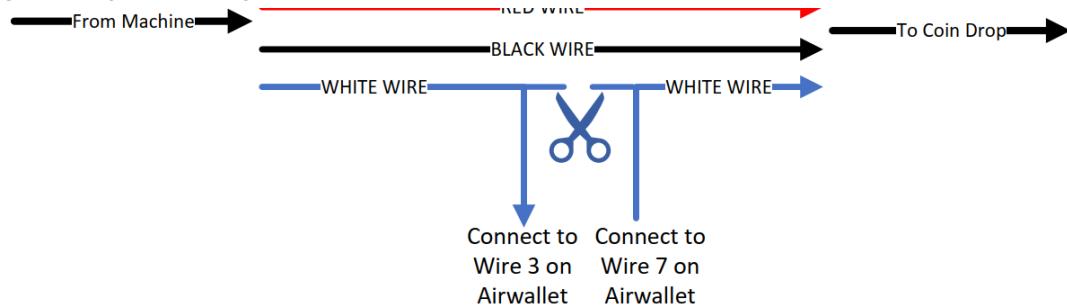


## POWER CONNECTION

10. Locate the AC power block inside of the machine. On the FRONTLOAD washers, it will be located inside the machine. Usually on the rear right side. On the TOPLOAD washers, it will be inside the control panel. The incoming power wires will be BLACK or BROWN (L) and WHITE or BLUE (N) wires. power input depending on the country you are located in.

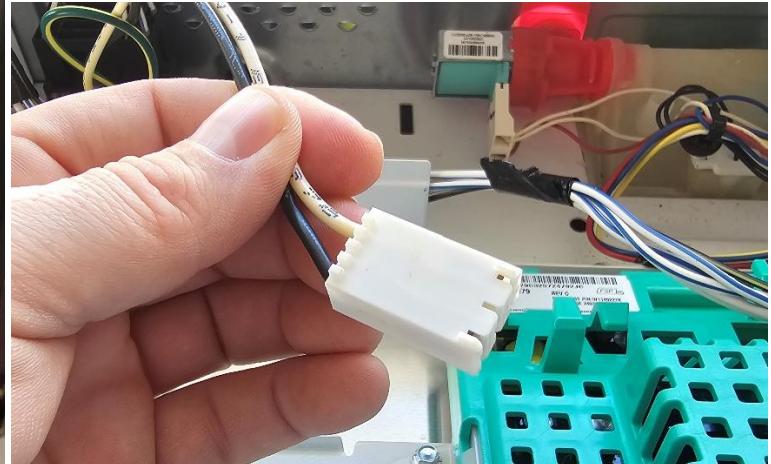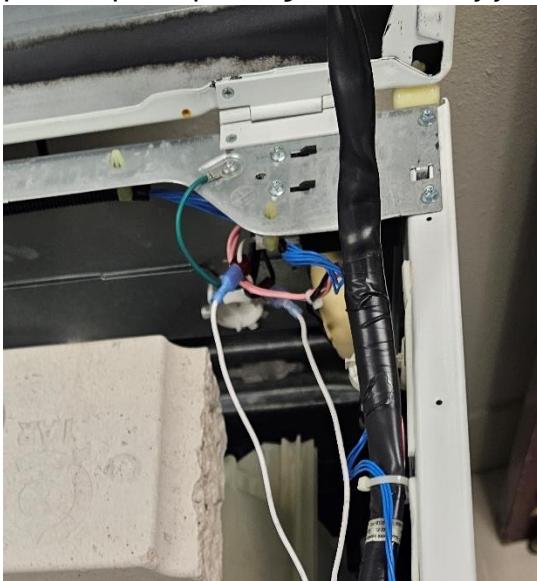


11. Install the RED 3M 951K wire crimps to the power wires and then plug the two power wires into the crimp connectors. **NOTE! You may need to create extension wires to reach the power connection.**

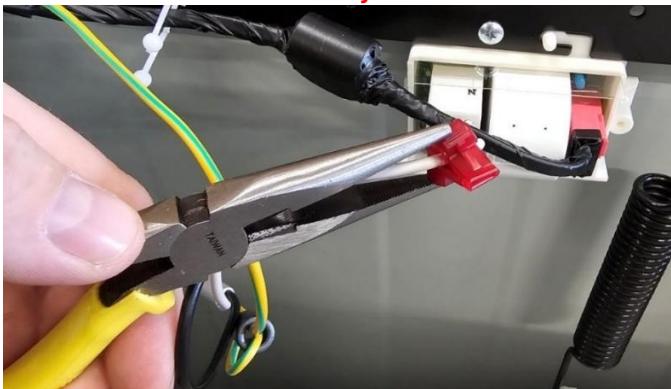


# airWallet


12. Connect WIRE 1 from the Airwallet Unit to the BLACK or LIVE wire. Connect WIRE 2 from the Airwallet unit to the WHITE or BLUE wire.

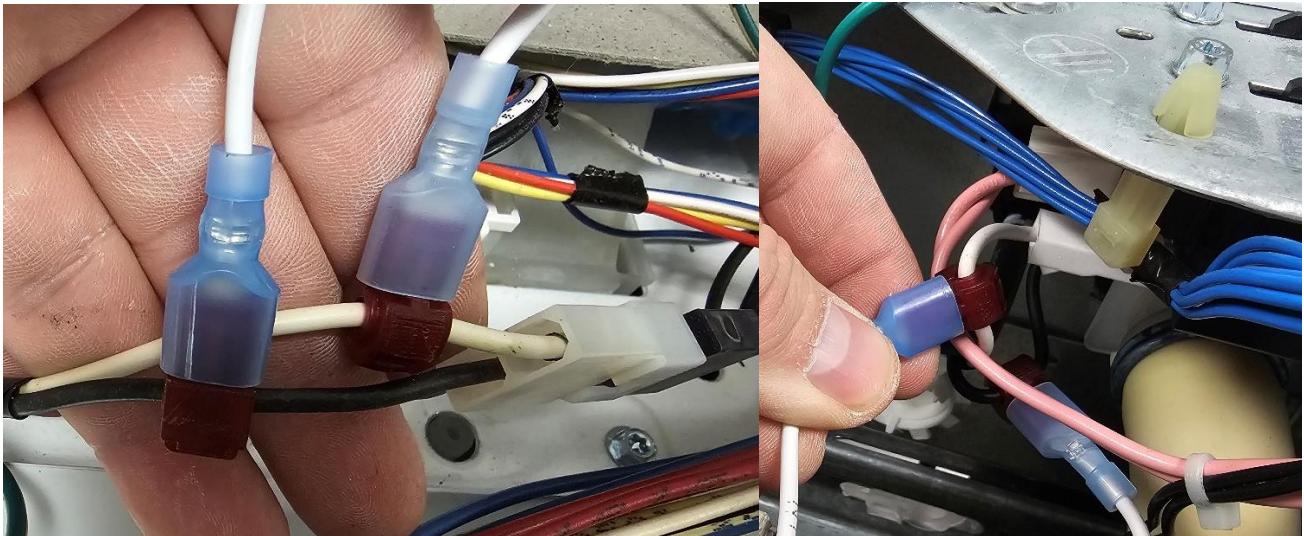

13. **TOPLOADER** : Mount the device inside the control panel on the or on the back of the machine for best results.

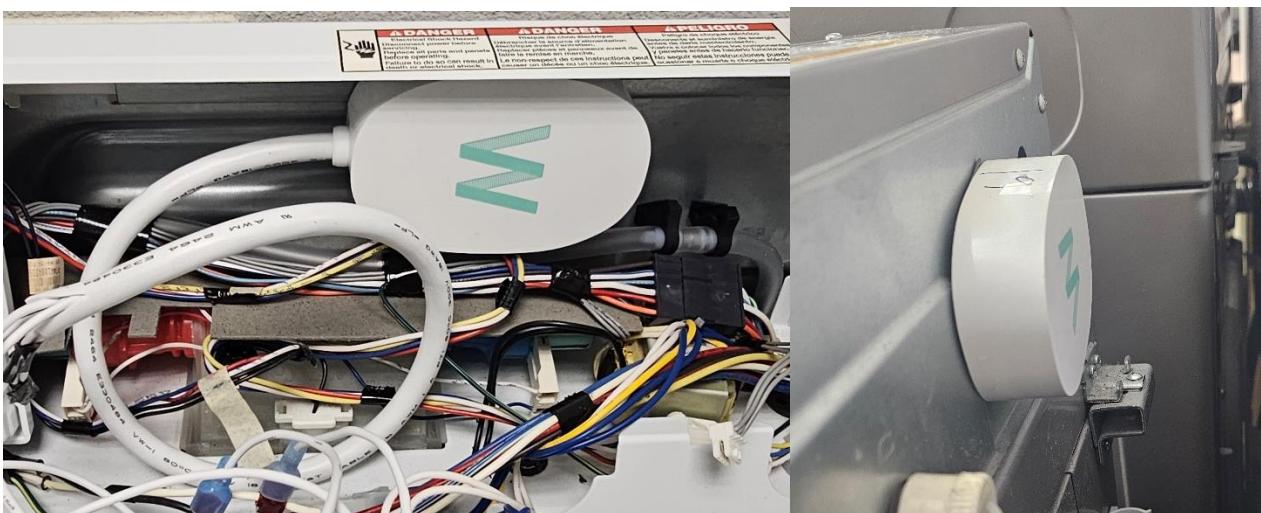

14. **FRONTLOADER**: Mount the device on the cross bar inside the machine or on the back of the machine for best results.

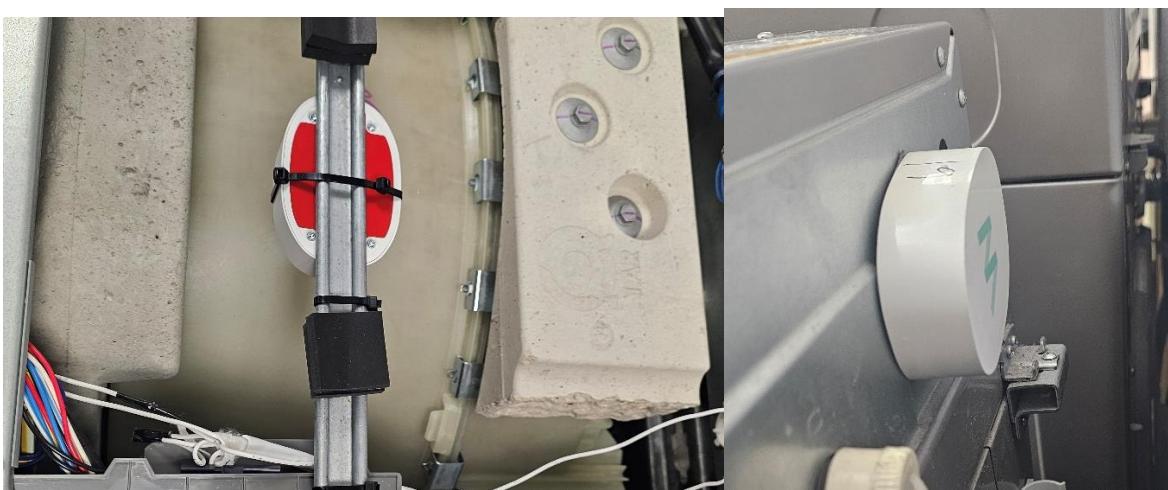

# airWallet

15. If the Dashboard programming has not been done prior, make sure to note the serial number or take pictures of the label on the bottom of the PRO300 unit.



16. Once you have confirmed all connections are made, and the serial numbers are gathered you can reassemble the machine and proceed to the software setup.